

### Models:

OMC40: 40 Programmable Points	OMC40D: OMC40 with Display
OMC20: 20 Programmable Points	OMC20D: OMC20 with Display
OMC14: 14 Programmable Points	OMC14D: OMC14 with Display

DS 30.01

February 2020

### Overview

The Innotech Omni generation of Native BACnet BEMS Controllers are state of the art digital processing systems suitable for various types of control applications typically found in building management and process control.

High speed data processing technology, customisable multi protocol communication interfaces, combined with a fully user configurable input/output interface for field device connectivity allows for out-of-the-box project flexibility.

Omni's Programmable Points (UI/O) can be used universally as inputs or outputs.

Each Omni controller supports various industry standard protocols with enhanced capabilities including routing between networks and protocols.

Additional protocol and communications interfaces are supported via Omni Expansion Bay Modules.

Each controller has a feature rich embedded webpage providing user level controlled access to the device system configuration including, real time monitoring and trending, graphing, diagnostics, alarm status, log extraction and scheduling functions.


The optional Human Machine Interface (HMI) can be ordered with the Omni BEMS Controller or used externally via various mediums. The HMI is customisable during the configuration process and can display relevant live information as well as providing access to system settings.

Easily accessible USB ports offer a fast localised configuration interface and access to logged data.

Omni controllers are fully programmable via the Innotech Focus graphical programming interface.

### Features

- 40, 20 or 14 Point (UI/O) models with the ability to use any point as an input or output, allowing greater flexibility
- Expandable via Omni Remote Expansion Modules
- UI/O update rates up to 500Hz (2ms)
- Individual UI/O LEDs for status indication and fault diagnostics
- Compatible with existing Innotech controller networks
- Optional customisable HMI with click-wheel navigation
- Colour coded pluggable terminals for easy identification
- Ethernet, RS-485 and USB communications
- Communication LEDs for all interfaces
- Protocol routing/conversion capability
- Battery backed Real Time Clock
- Easily programmed with Innotech Focus software
- Feature rich multi-platform Web server
- Polarity independent AC or DC Power Supply
- Dedicated Innotech Smart Sensor (ISS) communications
- Expansion port for additional protocol/communications (selected models only)
- User replaceable log data memory via MicroSD
- Reporting of controller and programmable point self-diagnostics

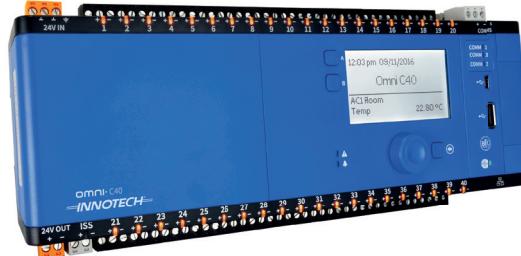

### Applications

Omni BEMS Controllers offer a large array of programmable points to monitor and control all types of external plant and equipment.

Omni BEMS Controllers are ideal for HVAC, Building and Energy Management, automation as well as process control.

The creation of control strategies is made simple with the Focus engineering software. With its powerful graphical programming interface, Focus allows the user to create a project-wide control strategy.

Typical applications include:

- Building Management and control
- Energy Management and Analysis
- Heating, Ventilation, Air-Conditioning & Refrigeration (HVAC & R)
- Process control
- Lighting control
- Monitoring and Data logging
- Protocol conversion or routing
- Distributed I/O points controller
- Cold/Freezer rooms
- Various OEM Applications

### Installation

The controller should be installed in an environment that does not exceed the maximum operating parameters of the device. It should be mounted in a clean and dry environment free of vibration, and properly ventilated.

The controller should be mounted on DIN rail in cabinets approved for switchgear or industrial control equipment. Maximum terminal cable entry is 1.5mm<sup>2</sup>.

Wiring should be done in accordance with Innotech connection diagrams, Installation Instructions and local bylaws or refer to your local distributor.

Connect the 24VAC/DC supply to the correct terminals on the controller. Wire the EARTH terminal of all controllers to a DIN rail earth terminal on the same rail, or the nearest earth stud.

All cable screens should connect to the same earth point unless otherwise stated in the Innotech Device Network Cabling Manual.

## Model Specification

Controller Name	Omni C40	Omni C20	Omni C14
<b>Processor Speed</b>	800MHz	800MHz	600MHz
<b>Programmable Points (UI/O)</b>	40	20	14
<b>Non Volatile Memory</b>	128KB	128KB	8KB
<b>Real-time Clock</b>	Yes	Yes	Yes
<b>RS-485 Ports</b>	3	3	2
<b>Ethernet - 100BASE-T</b>	2	2	1
<b>8GB MicroSD for Logging</b>	Yes	Yes	Yes
<b>HMI (on-board)</b>	Optional	Optional	Optional
<b>HMI (External)</b>	Optional	Optional	No
<b>USB-A (Host)</b>	Yes	Yes	No
<b>USB-Mini B (PC Link)</b>	Yes	Yes	Yes
<b>Innotech Smart Sensor RS-485 Comms</b>	Yes	Yes	No
<b>Field Supply 24VDC</b>	Yes	Yes	No
<b>Expansion Port</b>	Yes	Yes	No
<b>Omni U10 Support (Total Devices)</b>	5	5	0
<b>UI/O Point Processing Limit</b>	90	70	14
<b>Web Server</b>	Yes	Yes	Yes
<b>Protocol Routing</b>	Yes	Yes	Yes
<b>BACnet Broadcast Management Device</b>	Yes	Yes	Yes
<b>Max. Power per UI/O</b>	0.5W	0.5W	0.5W
<b>Max. IO System Power</b>	18W	10W	4.5W

**i** The real-time clock battery is user replaceable but should only be replaced by qualified Innotech service technicians. The battery is located in the expansion bay on all models.

The MicroSD card also contains PDF documents. For the latest documents, visit [www.innotech.com](http://www.innotech.com).

The optional on-board HMI module can only be installed by qualified Innotech service technicians.

## General Specifications

PROCESSOR	
CPU	ARM Cortex A8
POWER SUPPLY REQUIREMENTS	
Power Input	24VAC ±20% or 24VDC (18VDC to 35VDC)
Recommended Transformer Ratings	(per controller)
Omni C40	40VA
Omni C20	20VA
Omni C14	15VA
Power Consumption	6W to 30W (model & load dependent)
24VDC Supply Output (C40 & C20 Models Only)	Unregulated, isolated 24VDC output, ~1.5W, 65mA max, overload protected.

**i** Polarity independent supply wiring.  
The power supply is full wave rectified to reduce transformer stress.  
The controller's earth terminal must be connected at all times.

The operating voltage must meet the requirements of Safety Extra Low Voltage (SELV) to EN60730. The transformer used must be a class 2 safety transformer in compliance with EN60742 and be designed for 100% duty. It must also be sized and fused in compliance with local safety regulations.

### ENVIRONMENTAL

Operating Temperature -10° to 50°C non-condensing  
14° to 122°F non-condensing

Storage Temperature -20° to 60°C non-condensing  
-4° to 140°F non-condensing

### INSTALLATION ORIENTATION

Horizontally mounted DIN rail on a vertical surface.  
Allow a minimum 20mm (40mm recommended) gap between the end of the terminal plug and cable ducts.

### ENCLOSURE

Housed in a rectangular case suitable for DIN rail mounting. Housing moulded from flame retardant plastics recognised by UL as UL94-V0.

Colour Blue/Black

### Dimensions

Omni C40 W 280mm x H 93.4mm x D 80mm  
(11.02" x 3.68" x 3.15")

Maximum Dimensions (with HMI and Terminals) W 280mm x H 113.44mm x D 87.9mm  
(11.02" x 4.47" x 3.46")

Omni C14 and C20 W 180mm x H 93.4mm x D 80mm  
(7.09" x 3.68" x 3.15")

Maximum Dimensions (with HMI and Terminals) W 180mm x H 113.44mm x D 87.9mm  
(7.09" x 4.47" x 3.46")

### APPROVALS AND LISTINGS

EN61326:2013 Class A for CE & RCM Labelling

Title 47 CFR, Part 15 Class A for FCC Marking

UL Listed to UL916, File Numbers PAZX.E242628, PAZX7.E242628

Listed by BTL

### BATTERY

Contains a Lithium Type Battery, Dispose of Properly.  
(In accordance with local regulations)

- Type: CR-2032 Lithium (user replaceable)
- Nominal voltage: 3 Volts
- Shelf life: 5 Years, dependent on ambient temperature

**!** Caution: Risk of explosion if battery is replaced by an incorrect type.

COMMUNICATIONS	
Ethernet	100Base-T
RS-485 Comms Inputs	Up to 115kbps (with EOL)
ISS Comms	Innotech Smart Sensor Comms

DEFAULT SETTINGS FOR COMMS CHANNELS			
Comm1	RS-485	No Default Set	
Comm2	RS-485	No Default Set	
<sup>i</sup> <sup>1</sup> Comm3	RS-485	No Default Set	
	IP Address	192.168.2.100	
	<b>Application</b>	<b>Transport</b>	<b>Port</b>
Ethernet A	Local / Remote Communications	TCP/UDP	20000
	Local Communications	UDP	47808
	Web Server	TCP	80
<sup>i</sup> <sup>2</sup> Ethernet B	Switch Mode		

DEFAULT ADDRESSES	
Innotech	1
BACnet	2100

CONFIGURING / MONITORING / COMMUNICATIONS	
<sup>i</sup> <sup>1</sup> USB Host (A Type Connector)	High Speed 480Mbps → Supported Peripherals such as HMI and Flash Drive. (200mA load max)
<sup>i</sup> <sup>3</sup> USB Device (Mini-B Type)	High Speed 480Mbps → Computer Connection Virtual IP Address: 169.254.2.100
<sup>i</sup> <sup>1</sup> Expansion Port	Card slot located in the expansion bay for optional modules.
Data Logging	
MicroSD Slot	8GB Class 10 MicroSD card supplied

PROTOCOLS	
• Innotech on IP	
• Innotech REM Comms	
• Innotech RS-485 Net Comms	
• Innotech RS-485 Global Comms	
• BACnet MS/TP	
• BACnet/IP	
• Modbus RTU	
• Modbus TCP	
<sup>i</sup> <sup>4</sup>	Portions of the software copyright Cimetrics Inc.

EXPANSION BAY MODULES	
Isolated RS-485 (1 channel)	
HUMAN MACHINE INTERFACE (HMI)- Optional	
<sup>i</sup> <sup>5</sup> On-board HMI LCD Display (backlit)	128 x 64 pixels monochrome graphical display (white)
Menu Navigation and Parameter Input	<ul style="list-style-type: none"> <li>• Click wheel with push action</li> <li>• Back/Escape Button</li> </ul>
<sup>i</sup> <sup>6</sup> Factory Programmed Buttons	Two

LED INDICATORS	
Comms LEDs for RS-485	Red - Tx Green - Rx
ISS Traffic LED	Green
UI/O - Digital Output	Orange
UI/O - Fault	Orange Flash
Warning LED (on HMI)	Orange
Alarm LED (on HMI)	Red
Heartbeat LED	
Status OK	Green Flash
Fault	Red Flash
<sup>i</sup> <sup>7</sup> Request	Orange Flash
Power Fail	Slow Orange Flash

## Web Server

The Omni Web Server allows access to user programmed variables, schedules, system settings, log data (with export function), alarms, access control and real-time configuration monitoring and trends.

To access the web server, enter the IP address of the Omni Controller in your web browser, ensuring your device is on the same range.



The Omni Web Server uses HTML5 and requires no additional plugins, ensuring compatibility across multiple web browsers.

## Omni HMI Operation

Refer to the Omni User Instructions.

## FCC Class A Notice

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

**Note** – This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense. Modifications to this device, may void the authority granted to the user by the FCC to operate this equipment.

<sup>i</sup><sup>1</sup> Available on Omni C40 & C20 models only.

<sup>i</sup><sup>2</sup> Used as a network switch for computer or additional device connection.

<sup>i</sup><sup>3</sup> The Mini-B USB connection allows programming from iComm using a Virtual TCP connection, as well as access to the Omni web server.

<sup>i</sup><sup>4</sup> Modbus protocols activated with feature licence purchase and only available as Master Device.

<sup>i</sup><sup>5</sup> The optional Omni HMI is a "plug-in" component, which includes a click wheel, buttons and LEDs. The module can only be installed by qualified Innotech service technicians.

<sup>i</sup><sup>6</sup> A Button - Watch Page Menu  
B Button - Notifications / Alarms

<sup>i</sup><sup>7</sup> Shown when upgrading, during config transfer, initialising etc.

PROGRAMMABLE POINT (UI/O) SPECIFICATIONS				
<b>Current Loop Input</b>				
Range	0mA to 20mA			
Resolution	12bit @ 4096 steps			
Accuracy	±1.5% of reading @ 20°C (68°F)			
Drift	±150ppm/°C			
<b>Current/Voltage Input</b>				
Current/Voltage Input (CVT)				
• 333mVAC RMS type with internal burden resistor ONLY				
<b>!</b> CONNECTION OF STANDARD CURRENT TRANSFORMERS INSTEAD OF CVTs TO ANY UIO TERMINAL WILL CAUSE IRREPAIRABLE DAMAGE TO THE OMNI BEMS CONTROLLER AND PRESENT RISK OF ELECTROCUTION.				
<b>Digital Input And Pulse Counter</b>				
Max Pulse Count Frequency @ 2V Amplitude	100kHz			
Max Digital Input Response Rate	½ block cycle rate			
Max Digital Input Voltage	12VDC			
<b>!</b> Contact pulse counting mode is suitable for electronic switches only, unless adequately de-bounced.				
<b>Sensor Input</b>				
Supports	Thermistor NTC, Thermistor PTC			
Ranges	Selectable			
Resolution	12bit @ 4096 steps			
Accuracy	±1.5% of reading @ 20°C (68°F)			
Drift	±150ppm/°C			
<b>Voltage Input</b>				
Ranges - 0 to 10VDC	Selectable			
Resolution	12bit @ 4096 steps			
Limits	-0.5V to 12.5VDC			
Accuracy	±1.5% of reading @ 20°C (68°F)			
Drift	±150ppm/°C			
<b>Current Loop Output</b>				
Range	0mA to 20mA			
Resolution	12bit @ 4096 steps			
Maximum Output Voltage	9VDC @ 20mA			
Accuracy	±1.5% of reading @ 20°C (68°F)			
Drift	±150ppm/°C			
<b>Digital Duty Cycle Output</b>				
Frequency Range	60mHz to 976Hz			
Duty Cycle Resolution	14bit (16383 steps)			
Duty Cycle Range	0 to 100%			
Switch Modes	As per Digital Output specifications			
<b>Digital Pulse Output</b>				
Pulse Width Range	10µs to 268s			
Pulse Resolution	16bit (65535 steps)			
Switch Modes	As per Digital Output specifications			
<b>Digital Output</b>				
<b>Switch Modes</b>				
Toggle Switching (Auto)	On = 12VDC	Off = 0V		
High Side Switching	On = 12VDC	Off = Open		
Low Side Switching	On = 0V	Off = Open		
Switch Current	Refer to note			
<b>Protection</b>				
Inrush and short circuit protected	Response time: 64µs			
<b>!</b> For High Side and Toggle Switching modes, maximum available power is limited (45mA).				
For Low Side Switching, each channel can switch 200mA.				
<b>!</b> Caution must be used when using Low Side Switching. For more information, contact your Innotech representative.				
<b>Voltage Output</b>				
Range	0V to 10VDC			
Resolution	12bit @ 4096 steps			
Impedance	~80Ω			
Maximum Current	10mA			
Accuracy	±1.5% of reading @ 20°C (68°F) & $R_{load} > 10k\Omega$			
Drift	±150ppm/°C			

### License Statement

The software on this product may contain copyright protected software which is licensed under various open source licenses.


Copies of the corresponding licenses:

- are provided together in this product's built-in web interface (Device Info / Legal Information Page)
- can be downloaded at [www.innotech.com.au](http://www.innotech.com.au)


If foreseen in the corresponding open source license, you may obtain the corresponding source code and other related data for a period of three years after our last shipment of this product, by sending an email to [opensource@innotech.com.au](mailto:opensource@innotech.com.au). Please include the product model number, system version information and the corresponding license you wish to enquire about. This offer is valid to anyone in receipt of this information.

## Omni Controller Dimensions & Parts Identification

 Optional HMI Shown in all images

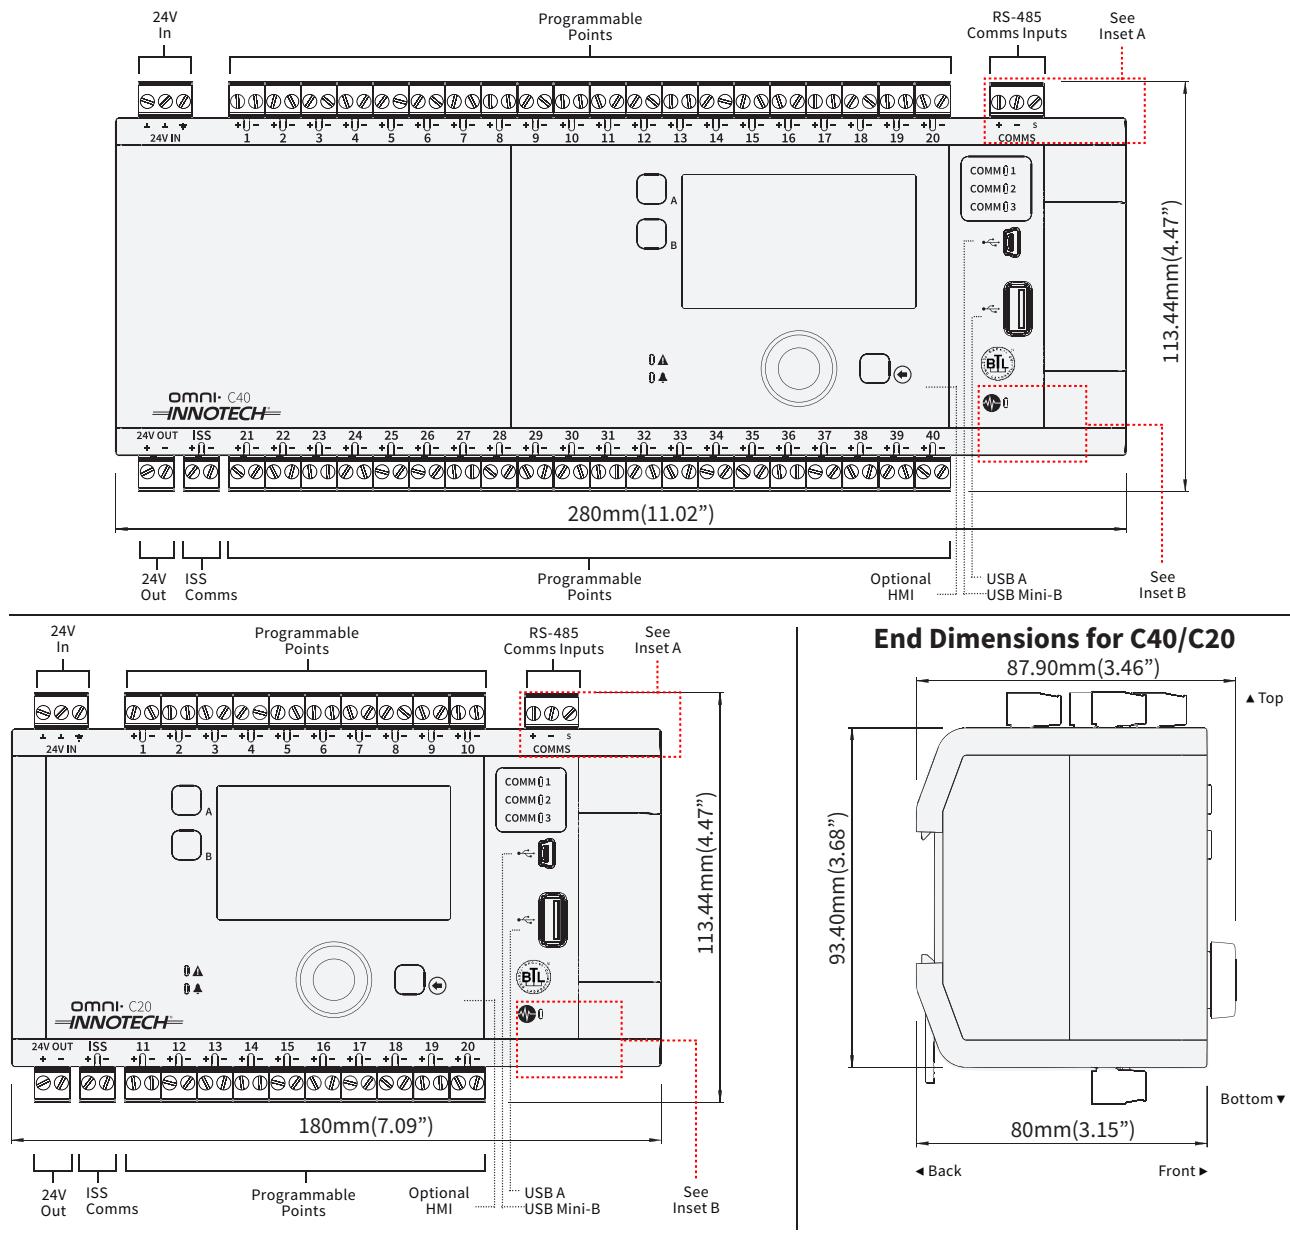


### Inset A

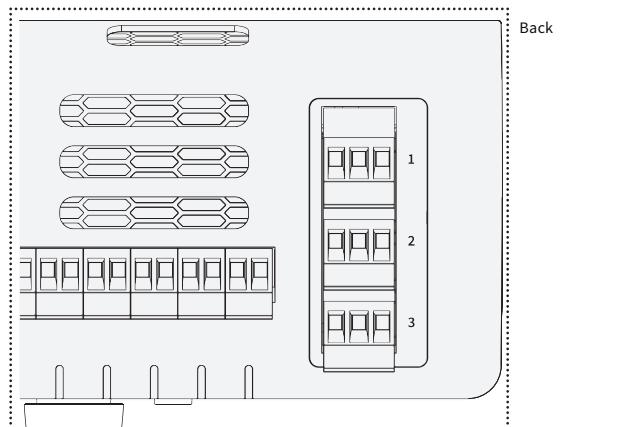


 When mounted on DIN rail, the RS-485 Comms port(s) are located on the **top** of the controller.

### Inset B

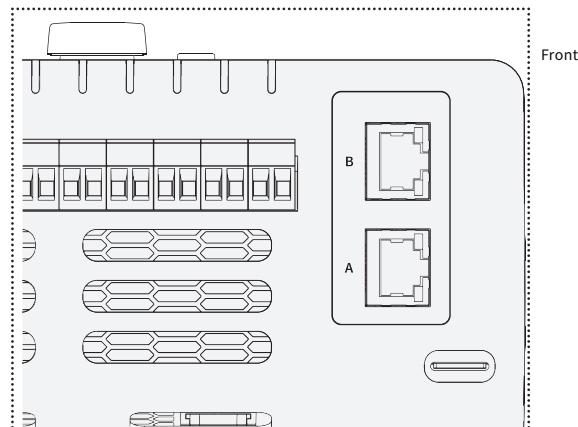


 When mounted on DIN rail, the Ethernet RJ45 port(s) and MicroSD slot are located on the **bottom** of the controller.


## Omni C14 Controller Dimensions and Parts Identification

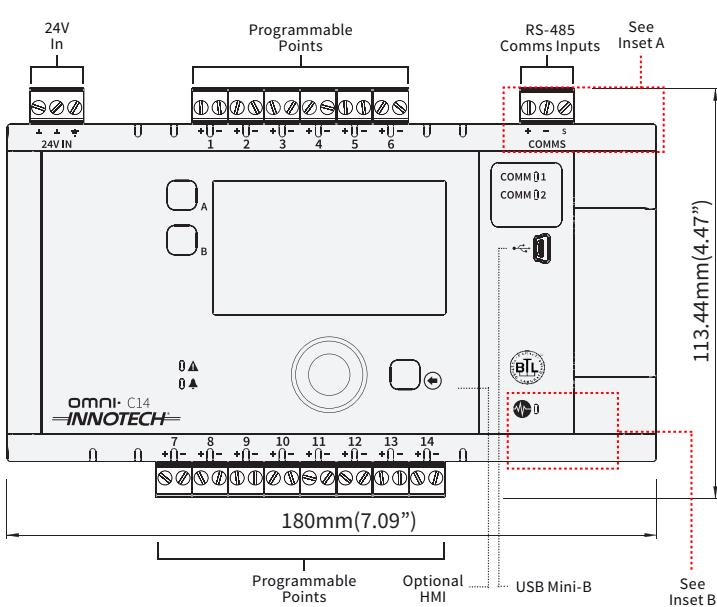

## End Dimensions for C14

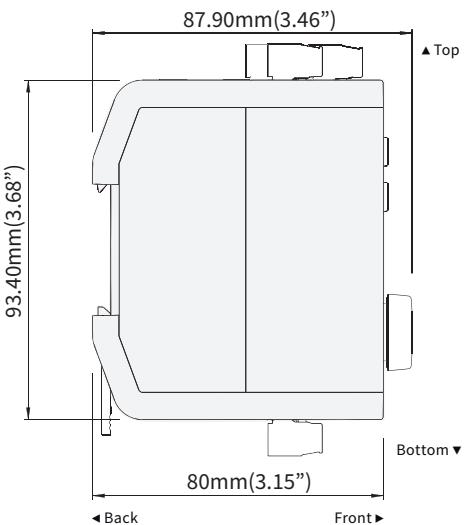


## Inset A

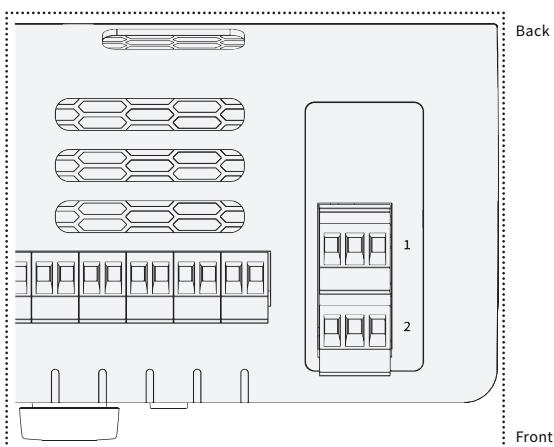

**!** When mounted on DIN rail, the RS-485 Comms port(s) are located on the **top** of the controller.

## Inset B

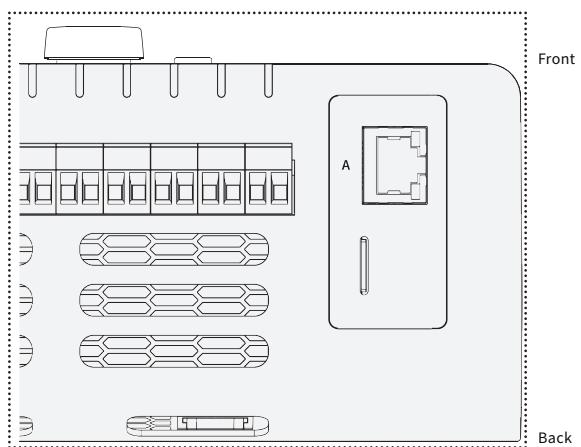

**!** When mounted on DIN rail, the Ethernet RJ45 port(s) and MicroSD slot are located on the **bottom** of the controller.

Australian Owned, Designed & Manufactured  
by Mass Electronics Brisbane

**INNOTECH**<sup>®</sup>

@ [sales@innotech.com](mailto:sales@innotech.com)

www.innotech.com

© MASS ELECTRONICS Pty Ltd 2016

INNOTECH and the INNOTECH logo are registered and unregistered trademarks of Mass Electronics Pty Ltd in Australia, the USA and other countries.