

Models:

GENII IDI REM: Opto Isolated Digital Input Module

GENII IDI REM**Opto Isolated Digital Input Module****Overview**

The Innotech GENII IDI REM Opto Isolated Digital Input Module is an expansion device for the GENESIS range of Digital Controllers.

The module is powered by 24VAC and provides 5 opto isolated digital inputs to sense signals from field equipment. The voltage detection range is 12 to 24VAC or DC.

The GENII IDI REM may be located remotely from the GENESIS Controller providing distributed digital inputs for the system. The GENII IDI REM is configured and programmed via the GENESIS Controller.

The GENII IDI REM communicates with the Genesis Controller via the REM Comms port. The remote link uses RS485 at a baud rate of 38400. For pre-version 5 controllers, a GENII RMI (Remote Module Interface) is required. Please refer to DS 15.01 for further information.

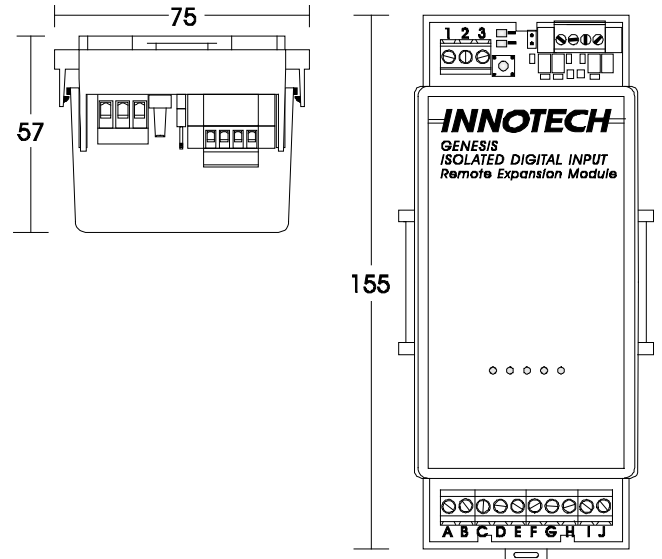
Features

- 5 Optically isolated digital inputs
- LED indication of input status
- Remote sensing and control of I/O points, up to 500m from the Genesis Controller
- Housed in a low profile DIN rail-mounted enclosure
- RS485 interconnection between modules
- Galvanic Isolation for communications to prevent grounding problems
- 24VAC operation
- JUMPER selectable Address Number (1-15)
- Wiring Diagrams for modules generated by GEN2Config Software
- LED indication of network traffic assists network setup & debugging

Approvals

The GENII IDI REM conforms to:

- EN61326-1:2013 for CE & RCM Labelling
- FCC Title 47 CFR, Part 15 Class A for FCC Marking
- UL listed to UL916, File Number E242628

**Applications**

- Expands GENESIS Digital Controller I/O capabilities by providing 5 opto isolated digital inputs allowing distributed data acquisition via RS485.

Application Notes

A GENESIS Controller must have version 4 firmware installed to support REM Modules. Version 4 Config Software must be used to configure a GENESIS Digital Controller that has REM Modules connected to it.

A GENESIS Digital Controller can have up to 15 GENII IDI REM Modules connected to it via the REM comms bus. For detailed connection information to the pre-version 5 GENESIS Digital Controller Family, please refer to DS 99.03.

Specifications

Power Supply

- 24VAC $\pm 10\%$ @ 50/60Hz
- Power Consumption: 4VA max


The operating voltage must meet the requirements of Safety Extra Low Voltage (SELV) to EN60730. The transformer used must be a Class 2 safety transformer that has the energy and voltage limiting characteristics as described in the National Electrical Code, ANSI/NFPA70. It must also be sized and fused in compliance with local safety regulations.

Inputs

- 0V OFF
- 12-24V ON
(voltage input may be AC or DC supplied by Class 2 power source)

Terminal Identification

1	24VAC Supply
2	0VAC Supply
3	Earth

 **TERMINAL 3** is for the protection of the Comms circuitry and must be connected to a good electrical bonded Earth. This may be the Earth bus bar of the switchboard or the point that connects the chassis of the equipment the Module is in, to electrical Earth. This point should not be tied to terminal 2.

COMMS Connection

SHLD 1	Shield from incoming Comms Cable
+	RS485 (+) signal
-	RS485 (-) signal
SHLD 2	Shield from outgoing Comms Cable

I/O Terminal Connections

A	Input 1+
B	Input 1-
C	Input 2+
D	Input 2-
E	Input 3+
F	Input 3-
G	Input 4+
H	Input 4-
I	Input 5+
J	Input 5-

Temperature Ratings

- Storage 0 to 50°C non-condensing
- Operating 0 to 40°C non-condensing

Enclosure

The GENII REM Modules are housed in a rectangular case made from flame retardant polycarbonate / ABS plastic listed under UL94.

Colour: Grey
Mounting: DIN Rail


Installation

The Cable run between the GENII IDI REM and the GENII RMI should not exceed 500 metres. The Comms wiring requires cable especially suited for RS485. Other shielded cable is not suitable and may cause spasmodic Comms failures.

The GENII REM Modules should be mounted on DIN rail in cabinets approved for switchgear or industrial control equipment.

Strictly follow the guidelines when installing the Comms wiring as outlined in the Genesis II Installation Manual. Mount the GENII IDI REM in a dry and clean location free of excess vibration.

There are four jumpers located in a row on the upper section of the GENII REM Module. These are labelled A0, A1, A2 and A3. These set the address of the GENII REM Modules. Directions for setting the address are shown in the wiring diagram generated by the GEN2Config software.

 If for some reason, an address for a module needs to be changed, the unit must be powered down before the jumpers are altered. Anti-static precautions should be taken when changing addresses or adding or removing cabling from the terminals.

Wiring

The cable used for RS485 Comms must be shielded single twisted pair, 120 ohms character impedance, 36 to 45pF per metre capacitance between conductors.

The Comms cable must be organised as a bus topology. That is, starting at one end, devices are connected to it until the other end of the cable is reached. No “stubs” are allowed. To connect a device to the cable, a cut is made in the cable at the point where the device is to be situated along it. Then, the two new ends of the cable are wired into the device. The shields from the two new ends are then terminated into the terminals marked SHLD1 and SHLD2 respectively.

Refer to the Genesis System Network Installation Instructions for more information.

Modifications to this device, may void the authority granted to the user by the FCC to operate this equipment.

This page has been left intentionally blank.

INNOTECH®

Australian Owned, Designed & Manufactured
by Mass Electronics Brisbane

Phone: +61 7 3421 9100 **Fax:** +61 7 3421 9101
Email: sales@innotech.com.au www.innotech.com.au

YOUR DISTRIBUTOR